



BAD BOY MOWERS


INSTALLATION INSTRUCTIONS:

REAR CARGO RACK

088-4055-00

WILL FIT ALL 2019 OUTLAW SERIES MOWERS

STEP 1

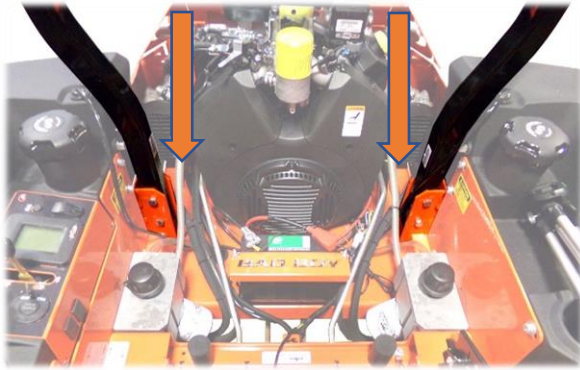

- Identify the location to be used in this installation.

STEP 2



- Remove and retain the two nuts that secure the bottom portion of the ROPS tube.

STEP 3




- Set the Side Panel Bracket in place.
- Align the flange holes on the bottom of the bracket with the bolts on the bottom of the ROPS.




BAD BOY MOWERS

STEP 4

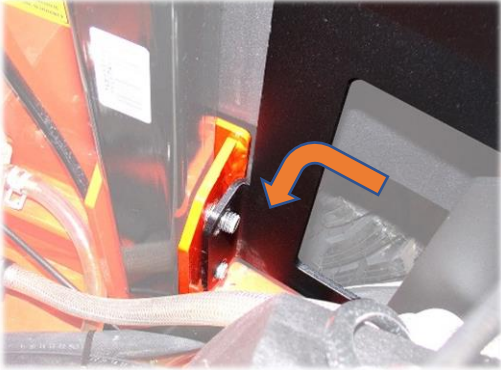

- Ensure that the flange portion of the side panel is directed to the outside of the machine as shown.
- Secure the panel with the previously removed nuts, remembering to leave the nuts only “hand tight”.
- Repeat the previous steps for the other side of the mower.

STEP 5

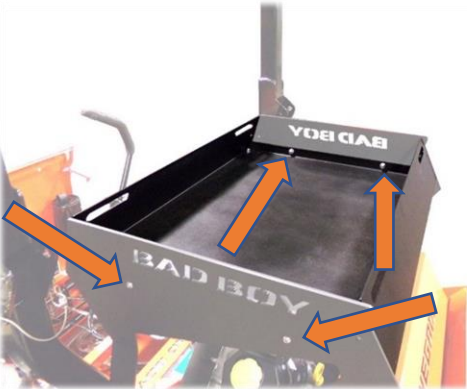

- Set the Floor Panel in place and align the flange holes with the corresponding holes in the side panels.
- Secure the floor the side panels using the provided $\frac{1}{4}$ -20 x $\frac{3}{4}$ ” button head bolts and locking nuts.

STEP 6



- Use the remaining $\frac{1}{4}$ -20 x $\frac{3}{4}$ ” button head bolts and locking nuts and the angled corner brackets to secure all four corners to the side panels.

STEP 7



- When all of the bolts are in place, adjust for square and level and tighten all of the bolts.