



BAD BOY MOWERS

INSTALLATION INSTRUCTIONS:

2019 OUTLAW SERIES REAR RECEIVER


093-1129-00

WILL FIT ALL 2019 OUTLAW SERIES MOWERS.



STEP 1

- Find the pre-cut holes on the frame and rear cover panel where the receiver will be located.

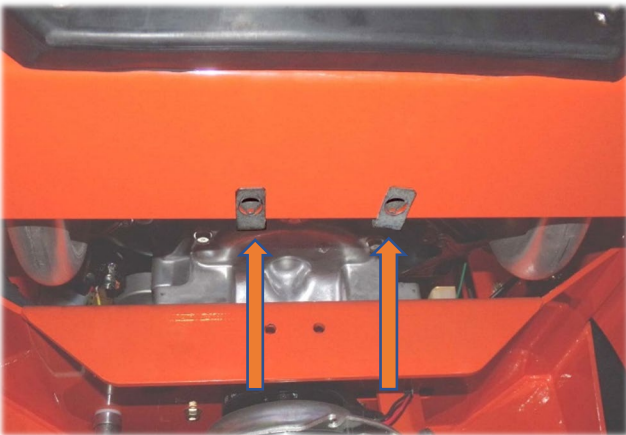

STEP 2

- Install the provided "U" nuts into holes on the rear cover panel with the flat side toward the ground as shown here.
- Adjust the "U" nut so that the corresponding holes align and a slight snap occurs.



STEP 3

- Use the provided 3/8 x 1" carriage bolts and the 3/8 x 1" hex head bolts to secure the receiver to the machine
-